


Quick Guide

FluoMini Pro Optical CF Seed Sensor

Display & buttons

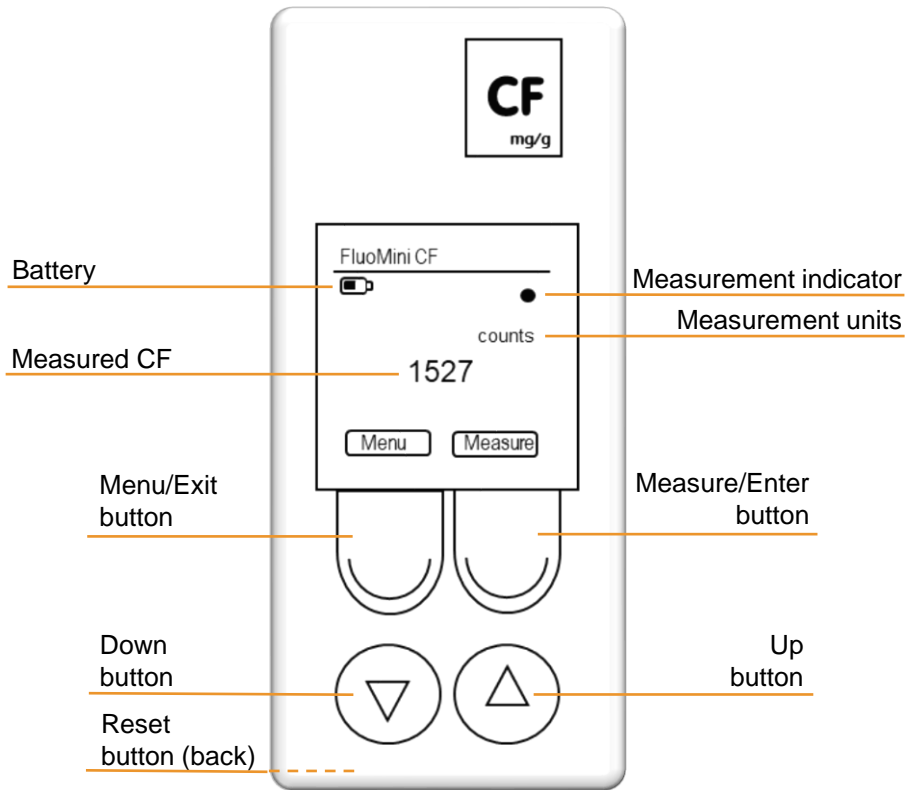

Menu/Exit button

Enter & exit main menu

Measure/Enter button

End sleep mode
Single measurement > press briefly
Start/stop continuous measurement > press 2 sec





www.sendot.nl



DISTRIBUTOR:
Centor Europe
Handelsweg 37D,
1619BJ Andijk, The Netherlands
t: +31 651 038 533
e: info@centoreu.com
www.centoreu.com

Calibration

Apply reference sample

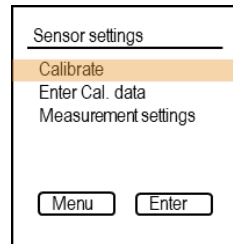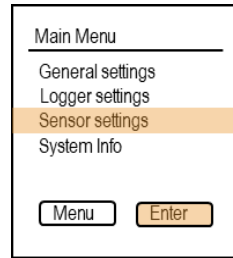




Choose between 1- or 2-point calibration

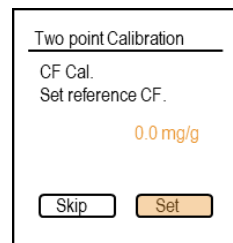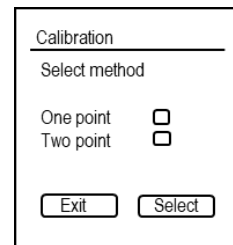




* Wait for a stable measurement

Log function

Set interval time

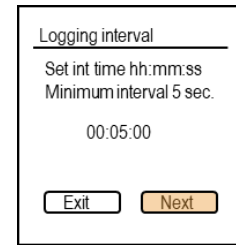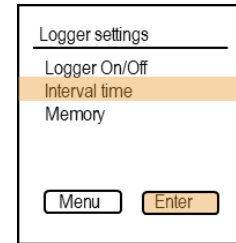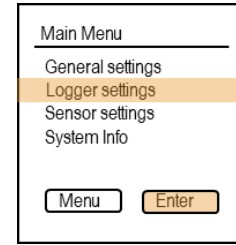



Start logging

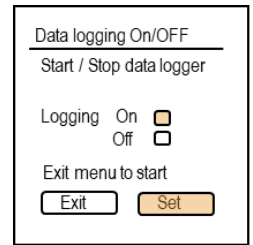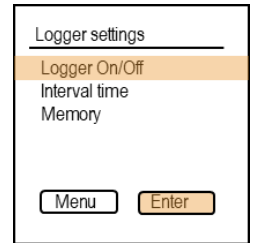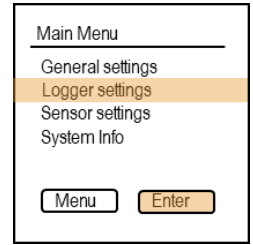

CAUTION!

Ensure to keep the glass of the probe holder clean to avoid falsified measurements. For further information read the manuals on our website.

Remove reference sample

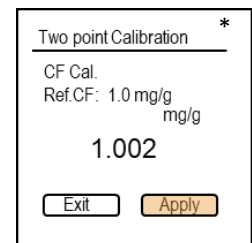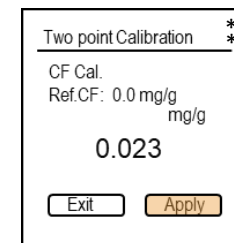

** Only for 2-point calibration